
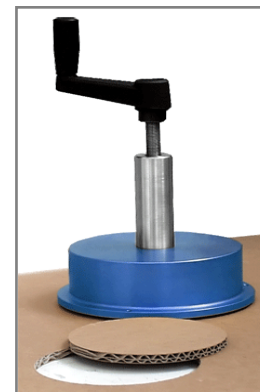


CIRCULAR CUTTERS “CD” series

(manually operated by rotating handle)

To cut accurate samples of **CORRUGATED BOARD** for F.C.T. Compression Tests and Basis Weight determination

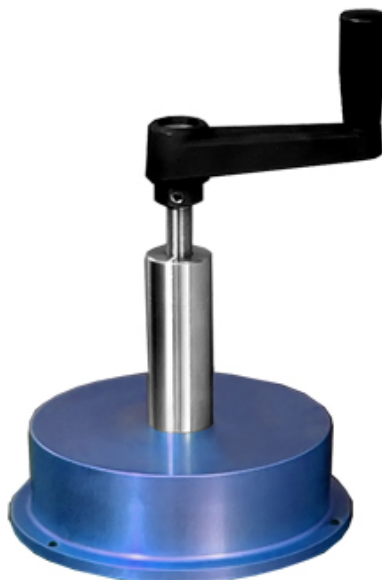

** Cutting ensured samples up to 10 mm thick*

The cut is effected by placing the samples **Corrugated Board** well flat above a sheet of cork or porous plastic, and applying the short-samples above the cardboard sheet to be cut is rotated the handle to cleanly cut the sample.

Cut depth to be adjustable easily for different sample thickness

The blade remains totally covered by the security chassis

With three fix pins to the sample, placed in the base, to avoid displacement of the equipment during the cut operation

Four models available:

- ✓ CD-100 model with 100 cm² area
- ✓ CD-50 model with 50 cm² area
- ✓ CD-64 model with 10 inch² area
- ✓ CD-32 model with 5 inch² area

DIMENSIONS AND WEIGHT:

Dimensions: 150 x 150 x 190 mm (W X D X H)

Bos for Transport: 300 x 300 x 350 mm (W X D X H)

Weight Net/Gross: 1,5 Kg / 5 Kg

DELIVERY CONTENT:

> Circular Sample Cutter (model ordered)



* TECHLAB SYSTEMS reserves the right to do any technical modification without advance notice

Doc. : CIRCULAR_CUTTERS_CD-1-CAT-I-R2